 


LightSync Photo Sensor Controller Installation Details

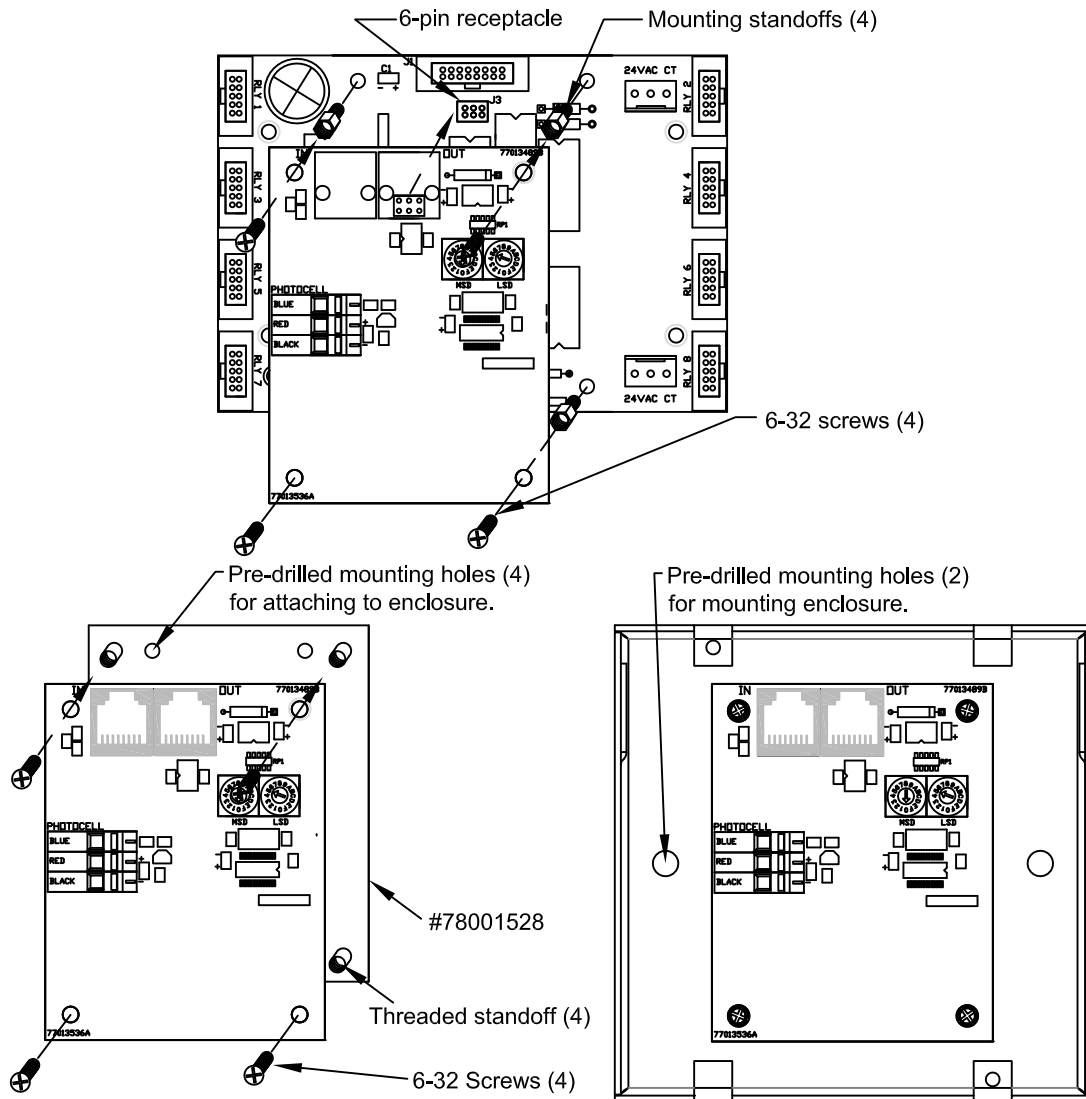

Panel Installation:

The module can be mounted directly on the Relay Driver Module in the LightLEEDer panel. The module must be installed on the next available relay control module from the top down. Turn the power to the Controller OFF. Carefully align the 6 header pins on the back of the module with the 6 pin receptacle located on the top of the Relay Driver Module, gently push and verify the connection, then install the screws provided. Verify the connection and set the address before powering the device.

Remote W/ Back-plate Installation:

Remove the module from the mounting plate by removing the 4 screws. Fasten the plate in an enclosure using the self-drilling screws provided. Replace the module, securing it with the 4 screws previously removed.

Remote W/ Add-on Enclosure Installation:

Install the add-on enclosure near the photo sensor head with the appropriate fastener using the mounting holes provided.

