

Map Timers to Relays:

1. From the home screen, press ► EDIT
2. Press ► TIMERS , then Press ► TIMER/RELAY CONTROL
3. Press ► TIMER/RELAY
4. Press ▼ or ▲ to select the timer that will control the relay, then Press ► RELAY to select relay, then press ▼ or ▲ to select the relay.
5. Press ► ACTION to select the action, then ▼ or ▲ to select the action
6. Do the above for each relay being controlled by each timer

Map Timers to Groups:

1. From the home screen of the Network Controller, press ► EDIT
2. Press ► TIMERS, then Press ► TIMER/RELAY CONTROL
3. Press ► TIMER/GROUP
4. Press ▼ or ▲ to select the timer that will control the relay, then Press ► GROUP to select the group, then press ▼ or ▲ to select the Group
5. Press ► ACTION to select the action, then ▼ or ▲ to select the action



LightLEEDer Quick Reference Guide

This Quick Reference Guide will help you program a few basic settings in the lighting system before it is programmed by a field technician. Refer to the LightLEEDer Operators Manual and the Quick Installation Guide for more information on how to install, test, and program this system.



INTELLIGENT LIGHTING CONTROLS, INC.

5229 Edina Industrial Boulevard
Minneapolis, Minnesota 55439
Phone 952 829 1900 FAX 952 829 1901
1-800-922-8004 www.ilc-usa.com

Configure a LightSync Switch:

1. From the home screen, press ► EDIT, then Press ► INPUTS
2. Press ▼ or ▲ to select the device address number
3. Press ► CONFIGURE DEVICE
4. Press ▼ or ▲ to select the switch type.
5. Press BACK, then CONFIGURE INPUTS
6. Press ▼ or ▲ to select the switch input. (each switch input per device requires a Type setup)
7. Press ► TYPES, then TYPES A/B, then TYPE A
8. Press ▲ to select the switch input type PB ON/OFF

Map a LightSync Switch Input to Control a Relay or Group:

1. From the home screen, press ► EDIT Press ► RELAYS, then Press ► INPUT MAPPING
4. Press ► LOCAL/RELAYS or LOCAL/GROUPS (see next section to set-up Groups)
5. Press ▼ or ▲ to select the LightSync input device address
6. Press ► INPUT and RELAY
7. Press ▼ or ▲ to select the LightSync Input and Relay
8. Press ► ACTION
9. Press ▼ or ▲ to select the action ON, OFF, or ON-OFF

Configure Relay Groups:

1. From the home screen, press ► EDIT
2. Press ► RELAYS, then Press ► GROUP RELAYS
3. Press ▼ or ▲ to select the group desired
4. Press ► GROUP, then press ▼ or ▲ to select the Group
5. Press ► RELAY, then press ▼ or ▲ to select the Relay
6. Press ► INCLUDE to toggle between YES and NO

Set the Clock:

1. From the home screen, press ► EDIT
2. Press ► CLOCK, then Press ► TIME/DATE
3. Press ► TIME, then press ► HOUR or MINUTE and use the ▼ or ▲ to buttons to make adjustments to either. Be sure that AM/PM is indicated properly for the time of day.
4. When the time is correct, press ► SET
5. If the date requires adjustment press ► DATE, then select MONTH, DATE, or YEAR and press ► the corresponding button then press ▼ or ▲ to adjust the values
6. When the time is correct, press ► SET

Configure Normal Timers:

Typically you will need to program 2 timers, one to turn relays ON and one for OFF.

1. From the Network Controller or single panel (standalone) home screen, Press ► EDIT
2. Press ► TIMERS
3. Press ► CONFIGURE TIMERS
4. Press ▼ or ▲ to select 1 of the 128 timers
5. Press ► TIME
6. Press ► NORMAL
7. Press ▼ or ▲ to change the hour. Be sure that the hour is set to AM/PM desired
8. Press ► MINUTE
9. Press ▼ or ▲ to change the minute