

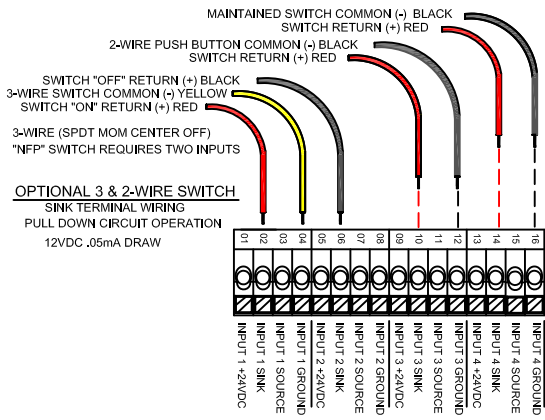
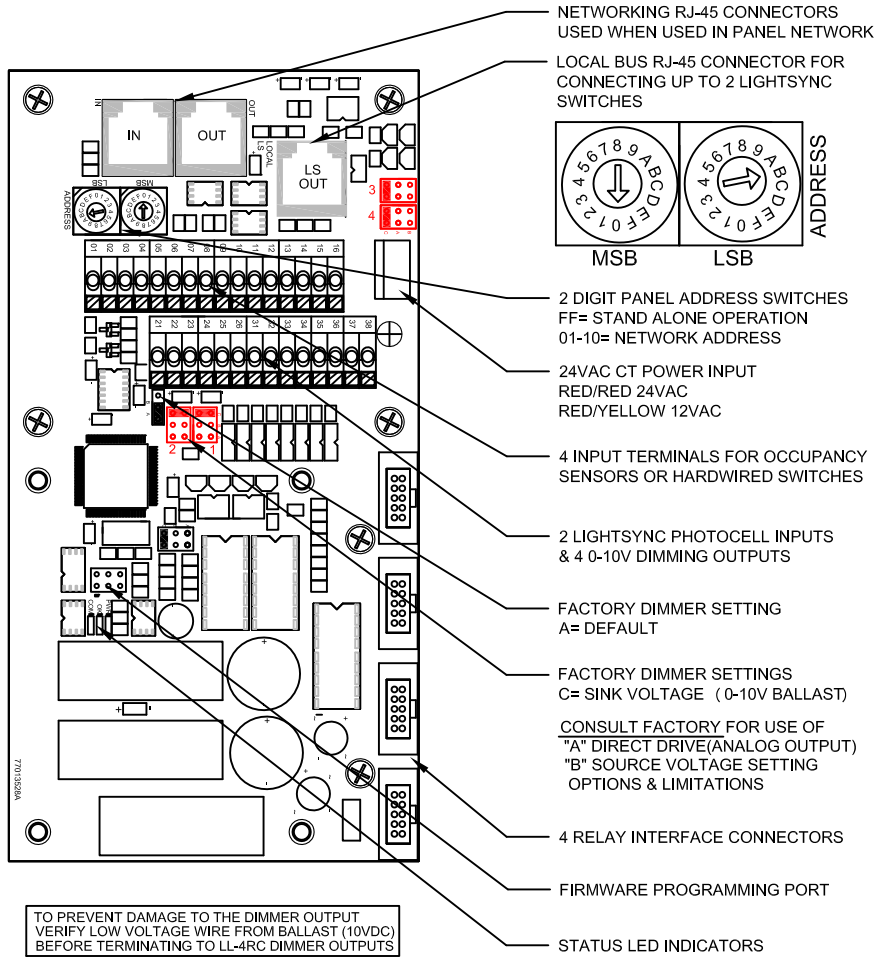



LightLEEDer 4 Load Room Controller Wiring Detail

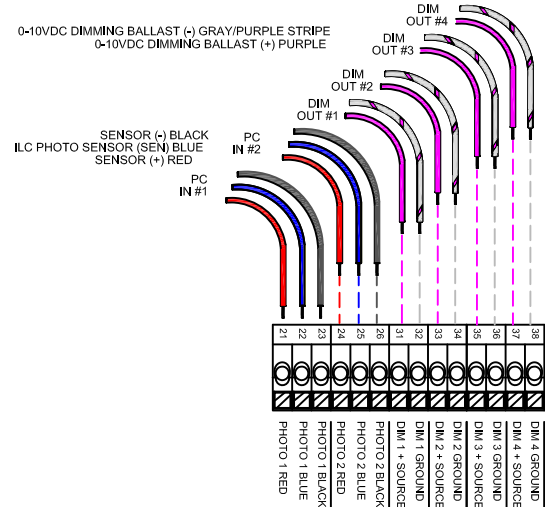

ATTENTION INSTALLING CONTRACTOR
YOU ARE REQUIRED TO SET THE ADDRESS OF THIS DEVICE ACCORDING TO THE RISER PROVIDED BY ILC. FAILURE TO DO SO WILL MAKE THE UNIT NON-FUNCTIONAL

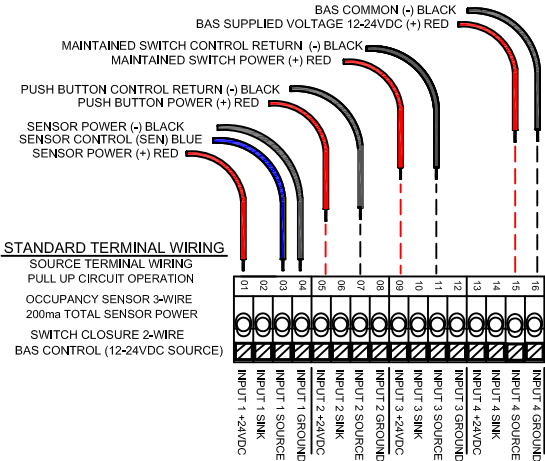

TRANSFORMER TERMINATION

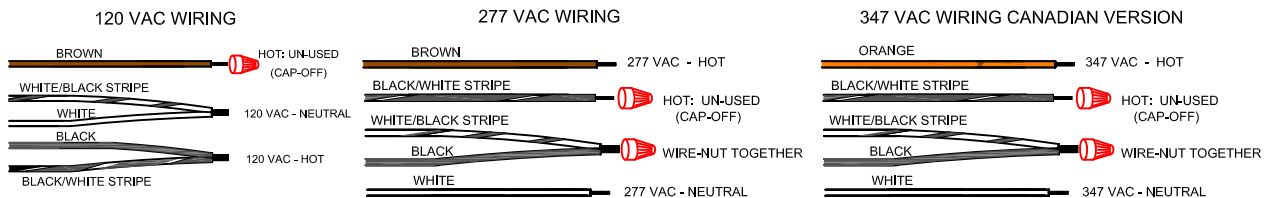

INTELLIGENT LIGHTING CONTROLS, INC.

www.ilc-usa.com 1-800-922-8004

PD0015 Rev D