


# LightSync Input Module Wiring Details

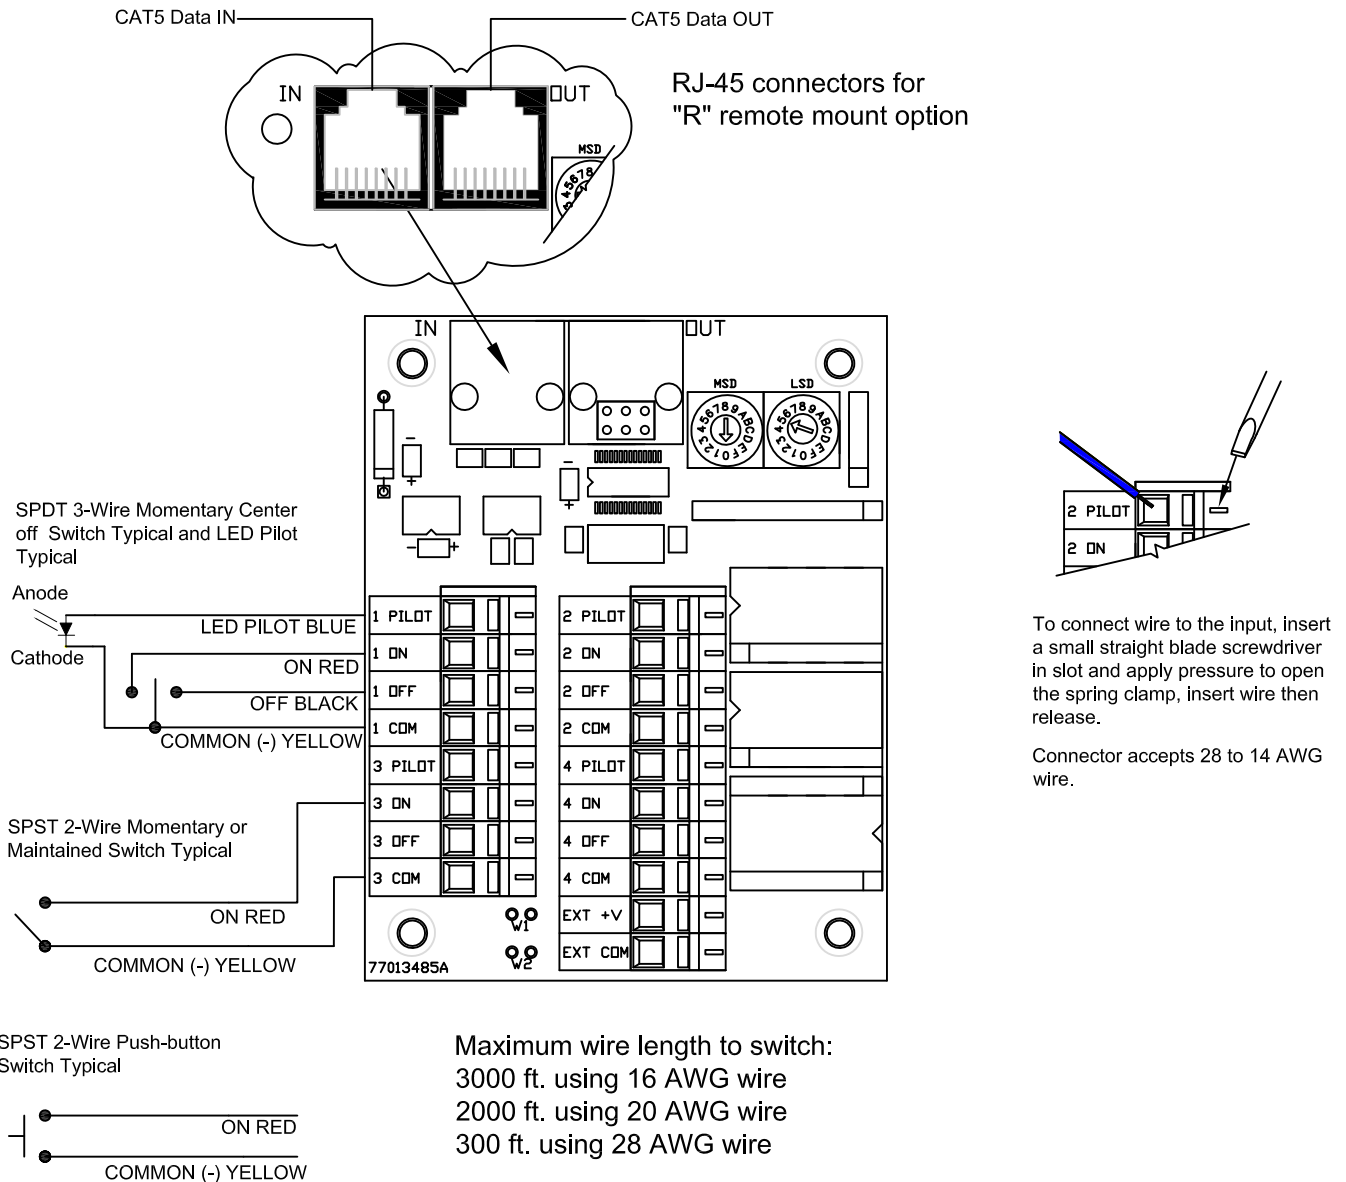

LightSync Input Modules are designed for interfacing remote hardwired switches and LED pilot status indicators.

**Input Connections:** Connect the wires from the switch and terminate using the wiring configuration shown above, follow the wire distance limitations. Pilot outputs connect as shown without the need for a limiting resistor.

**Data Connections:** For the remote module option, connect the LightSync data line to the IN port, then connect the OUT port to the next device.

