


# LightMaster Extended Network Firmware Upgrade

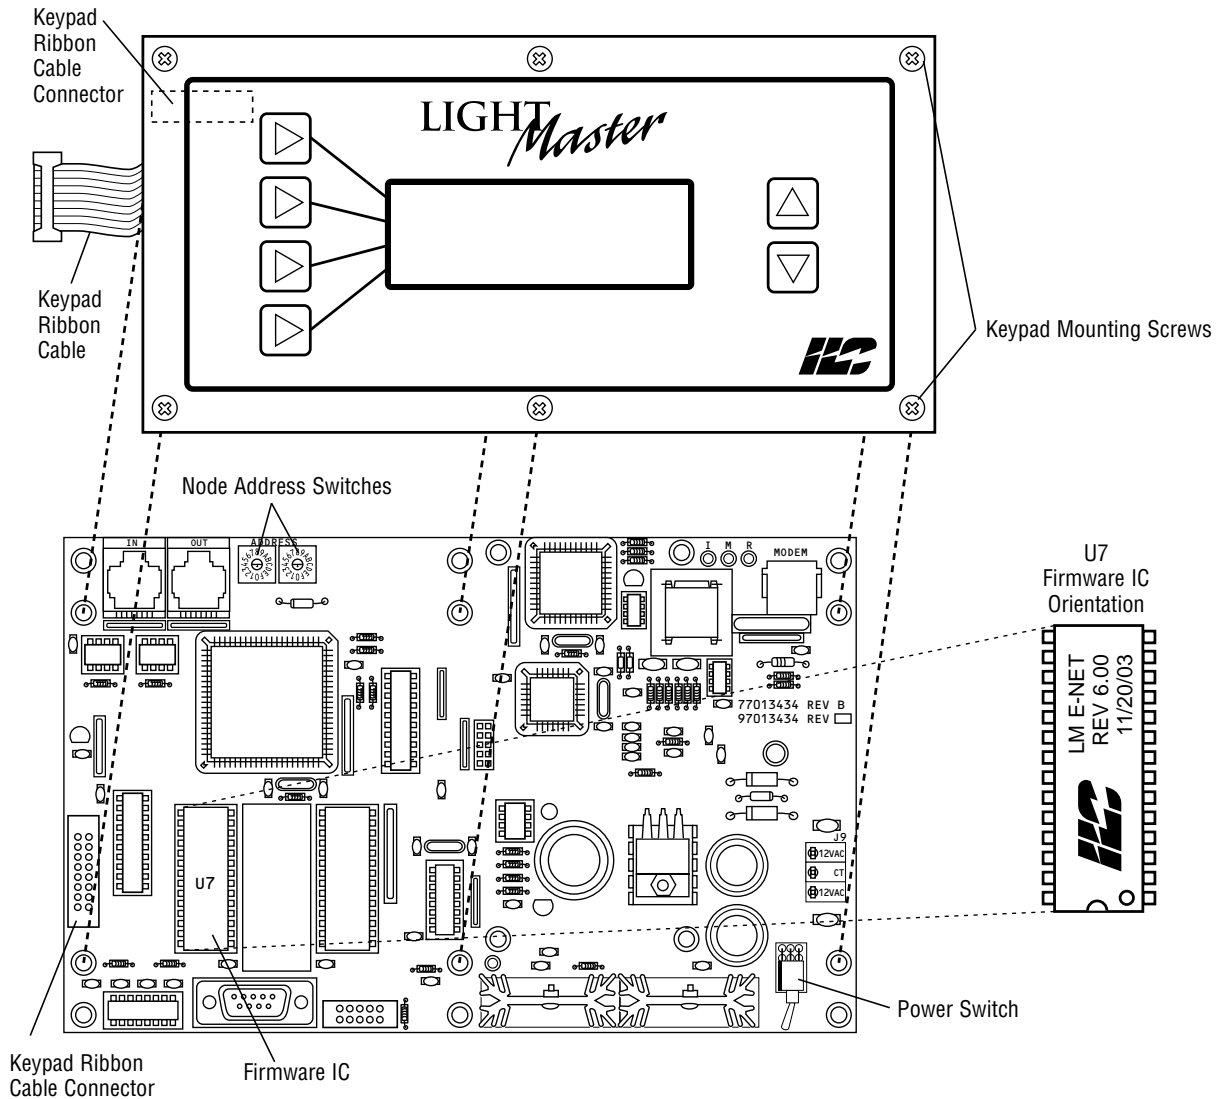

## Instructions:

- 1.) Turn Power Switch OFF
- 2.) Remove 6 screws from keypad. Carefully unplug ribbon cable connector and remove keypad assembly.
- 3.) Carefully remove the firmware integrated circuit (U7) from its socket. Use a chip puller if available or gently pry the IC from its socket using a small screwdriver.
- 4.) Replace U7 IC with E-Net IC. Be careful to install chip with proper orientation and install without bending legs. Inspect chip for proper orientation.
- 5.) Install keypad assembly by reconnecting the ribbon cable and replacing the 6 mounting screws.
- 6.) Set the Node Address Switches to a unique node address from 02-FF.
- 7.) Hold down upper left button on the keypad while turning on the power switch to power up the controller.
- 8.) Clear memory. Press EDIT. Press the down arrow on the right side of the keypad until SPECIAL FUNCTIONS appears, then select it. Press FIRMWARE REVISION, then press the up and down arrows at the same time to access the CLEAR MEMORY screen.