

ILC LightLEEDer Net Host Software
Release Notes

Version 27 10-Sep-2011

Addition of selective configuration clearing on Tools | AutoMap Tools screen

- Clear all input to relay mapping
- Clear all input to group mapping
- Clear all groups
- Clear all presets
- Clear all timer settings
- Clear all timer mapping

Version 28 11-Nov-2011

Gray out unused groups and presets in status screens

Fixed motor output / Preset control / Run duration display issue

(Display issue only. No changes to data files or upload/download)

Added Atlantic and Newfoundland time zones

Fixed Node 00 Device 40-7F Input to Group issue

(Edit issue only. No changes to data files or upload/download)

Added Pilot Auto Map for Node 00 inputs to groups and presets

Version 29 13-Jan-2012

Added "Copy Relay Mapping" button and source to input to relay mapping screen

Added "Copy Group Mapping" button and source to input to group mapping screen

Added arrow key functions to photocell tracking screen for more accurate scaling

Version 30 15-Feb-2012

Added dimmer output to relay control functions

Version 31 27-Feb-2012

Added name export function

Version 32 09-Mar-2012

Added screen for notes

Changed text from "Change Panel Password" to "Change System Password"

Changed MN text to NC

Set file name to NONE when uploading settings

Version 33 16-Apr-2012

Changed text Retro HWI to Retro LMI

Changed text Retro Hardwire Inputs to Retro LightMaster Inputs

Version 34 04-Jun-2012

Longer names shown for relays, groups, presets, and timers

Added Ctrl-C / Ctrl-V copy and paste key functions to name edit screens

Version 35 17-Sep-2012

PC level to foot candle scale adjusted to reflect measured readings

Version 36 17-Aug-2013

PC output power on level defaults set to 100%

Widened group drop down box in relay groups screen

Widened preset drop down box in edit preset screen
Fixed minutes/preset/timer from showing when LightSync device type is set to none

Version 38 18-Feb-2015

Password is ignored if a panel memory is completely cleared.
-All 6 ASCII chars are value 00x rather than 30x-39x
Added note to communications screen warning of cancelling downloads
Added dimmer feedback option on photocell input configuration
Added all 8 bits button on dimmer feedback configuration
Added options on automap pilots
-Clear all pilots prior to mapping
-Do not change configured pilots
-This node only
Added options on automap toggle sources
-Do not change configured toggles (Defined as source node < > 00)
-This node only
Both automap pilots and toggles find first relay/group rather than last
Both automap pilots and toggles only process active nodes
DMX mapping
-Click on a relay and select DMX channel
-Hold shift and click on last relay to set them all the same
-Hold shift and right click on last relay to set them all in sequence
Input to relay and group copy function has an "All 8 Inputs" option
Added dimmer control copy functions to select outputs
-Current node or all nodes
Modified dimmer configuration copy so you can select outputs
-Current node or all nodes
Added new input pilot types to documentation files
-Dimmer output level feedback
Documentation functions complete

Version 39 01-May-2015

Documentation function changes

Version 40 17-Jul-2015

Fixed relay name / multi pole display issue

Version 41 24-Aug-2016

Fixed documentation file output discrepancies

Version 45 17-Oct-2016

Fixed documentation file output discrepancies
Added new fields to documentation file output
-Separate columns for relay on/off and group on/off control
-Preset schedule control of dimmer and motor outputs
-Timer schedule control of dimmer and motor outputs
Modified toggle source auto map to apply only to PB Toggle and Maintained MW
Modified pilot auto map for PB Off input type to invert relay status
Added function button to auto configure pilots mapped to control dimmer outputs

Version 46 19-Oct-2016

Fixed timer AM/PM display on timer to relay, group, and preset screens

- Version 47 14-Nov-2016
Modified download sequence to minimize possibility of dimmers going to 0%
Dimmer control items may now be clicked to select active control
- Version 48 01-Mar-2017
Added Export To InSite function for panel names and mapping
- Version 49 08-Mar-2017
Added COPY button on documentation screen for folder path
Changed Download/Upload to Send/Get on connect screen
- Version 50 22-Mar-2017
Added Ramp Down/Up to dimmer control options
- Version 51 10-Apr-2017
Added Inverted Input function to dimmer output control configuration
- Version 52 03-Aug-2017
Added Export/Import functions for single node settings
- Version 53 15-Dec-2017
Added direct dimmer control and photocell/DMX control disable
Added right click control configuration on dimmer screen
- Version 54 22-Jan-2018
Fixed direct dimmer control 100% setting issue
- Version 55 03-May-2018
Added TCP/IP port selection in connection setting
Default port remains 10001 in absence of :<port> field
- Version 56 26-Jul-2018
Added network selection for Export To InSite tool to support multi-network InSite
- Version 57 19-Sep-2018
Export to InSite tool changed to clear mapping for disabled nodes
- Version 58 10-Oct-2018
Export to InSite tool changed remove invalid characters
- Version 59 21-Dec-2018
Retain last downloaded images on host PC
Allow “Download changes only” on first download after program restart
Added selective download to allow partial systems to be configured
Added “Bypass NC / Direct Connect” via a diagnostic tool for partial systems

Version 60 22-Jul-2019

Changed open screen logo and phone number

Added link to website

Added support for direct connection to EVO through protected port

Added support to recover from lost access key

Added quick links to navigate from screen to screen

Added Copy and Auto Map functions on Dimmer to Relay screen