

# Mobile LightSync Link App Programing Guide

Revision 2

## Overview:

The Mobile LightSync Link App emulates LightSync input devices used to control ILC relays and dimmer outputs from an Android or Apple mobile device. The Mobile LS Link App supports multiple user configured screens, to which control buttons and slide dimmers can be added. The App uses a Wifi connection to the LS SIICM TCP/IP module and is programmed in the ILC panel as LightSync input devices.


## Installation:

Download the ILC Mobile LightSync Link App from Google Play store or the Apple App store. Install the ILC Mobile LightSync Link App on your Android or iOS device.

Consult with your IT system controller to coordinate any LS-SIICM TCP/IP settings and wireless Wifi router or access point settings. You will also need to consult with your ILC system programmer for LightSync address settings designated for the LS-SIICM to be used by the Mobile LS Link App (ID0624).

## Configuration:


After launching the App, enter the IP address assigned to the LS SIICM TCP/IP module and the Port setting of **502**.

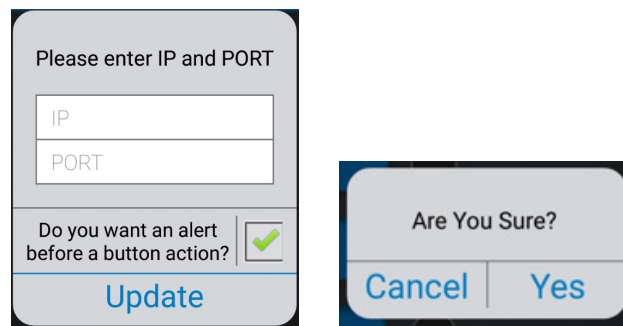

The image shows two screenshots from the Mobile LightSync Link App. The first screenshot is a configuration screen titled "Please enter IP and PORT". It features two input fields, one for "IP" and one for "PORT". Below these fields is a checkbox labeled "Do you want an alert before a button action?" which is checked with a green checkmark. At the bottom of the screen is a blue "Update" button. The second screenshot is a confirmation dialog titled "Are You Sure?". It has two buttons: "Cancel" and "Yes".

You also have an option for selecting an alert to be given for each button action. If selected, a dialog box will appear when a button action is used, alerting the user to select YES or to CANCEL the action.


In the upper right-hand corner of the navigation screen, press Add to create a new control screen. Enter the App password, and then press OK to proceed.

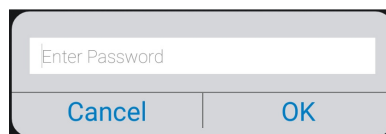


The image shows a password entry dialog. It has a text input field with the placeholder text "Enter Password". Below the input field are two buttons: "Cancel" and "OK".

Note: Consult ILC for the Password settings.

Enter the screen name which will be displayed at top center of the control screen.

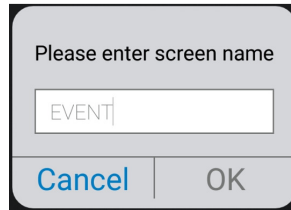


The Edit screen is now shown with the four edit option buttons on the left.

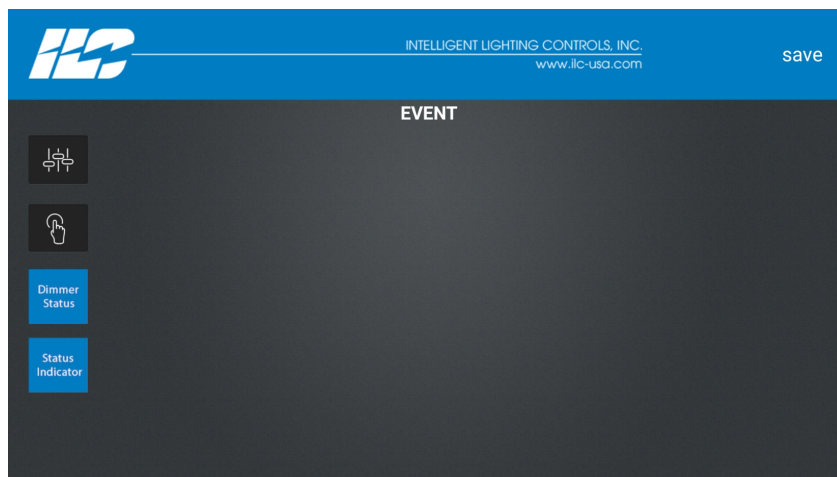

- **Slide Dimmer** - dimmer control Icon, emulates a LightSync Photo sensor
- **Touch Button** – control button Icons, emulates a LightSync input button
- **Dimmer Status** - 0-100% dimmer status display, directly reads a dimmer output
- **Status Indicator** - LightSync status Icon, indicates a LightSync input status

Each of the 4 Icon types will follow the same programming procedure.

Enter the component name if desired and select the ID #

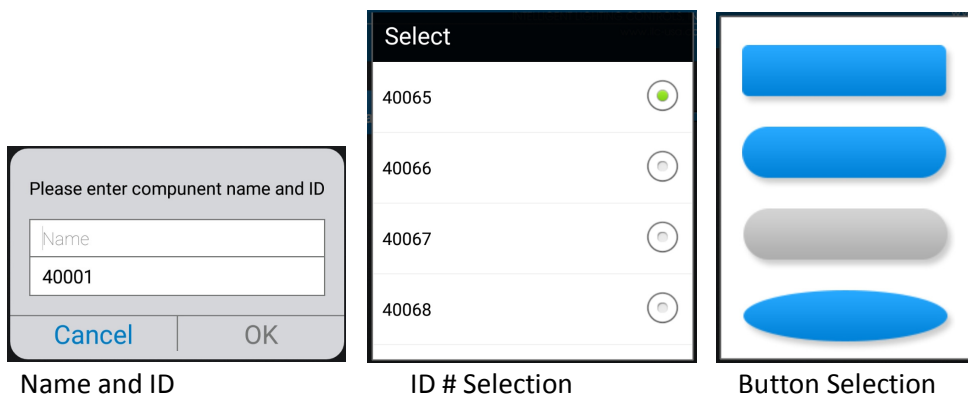

Name and ID


ID # Selection

Button Selection

Refer to the Mobile LightSync Link App ID point mapping chart (See Page 5) to select the ID points based on the LightSync LS SCIIM module settings (see PD0622 & ID0624).


Note: Status Indicator and Dimmer Status icons do not display the name information and is used for reference only.


The Icon will appear on the screen at the left, press and hold the icon until it highlights, And move it to the desired location. Press Save to exit the screen editing operation.

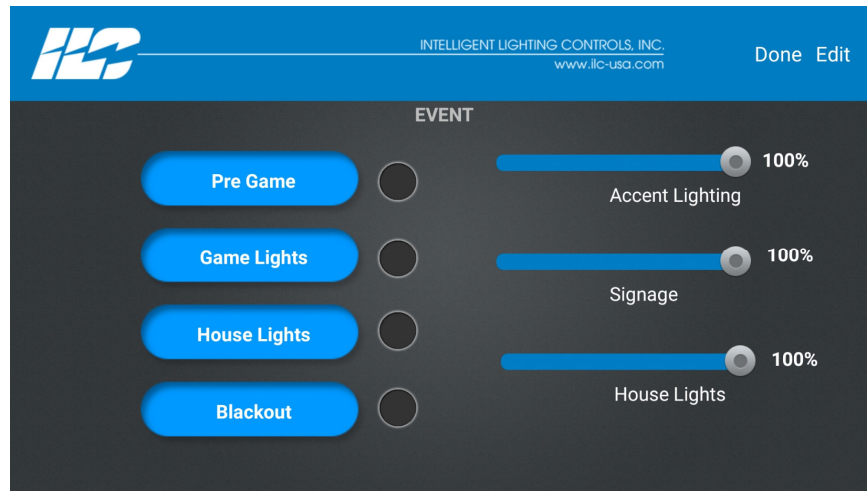

To return to the main navigation screen press Done, press Edit to make additional changes to the control screen.


On the main screen, a navigation button will be shown for each control screen you have configured, press the Icon to enter the control screen.

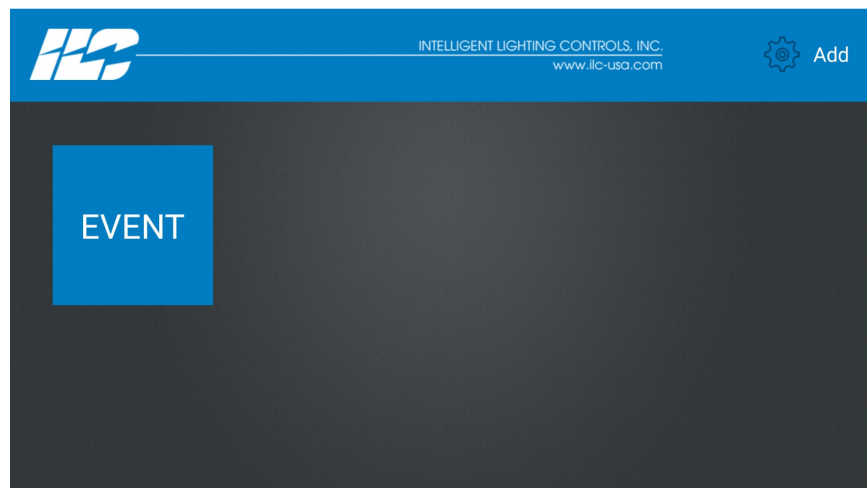

Select Add to create a new control screen, or the Settings Icon  to enter the App settings options.

**Deleting a Screen:**


Hold the Navigation button for the screen to be deleted to get the delete alert prompt.

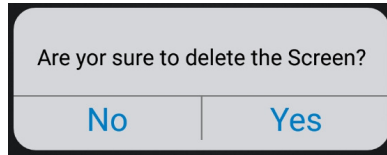

Press Yes to delete the screen

**Deleting or Editing an Icon:**

Enter the screen and select Edit, then tap the Icon to be removed or edited. Select "Yes" to delete the icon, or select "Edit" to make changes.

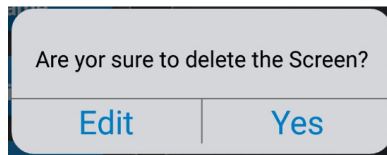

Note: This *will not* Delete the Screen, only the selected Icon on the screen

On the Mobile LightSync Link App ID point mapping chart you will find the ID's listed for all 4 Icon types. Each ID point is in sequential order starting at the first LS device address for the LSSIICM. This is based on the first address or base address. Refer to PD0622 and ID0624 for more details.

Note: The slide dimmers will occupy a photosensor type "LS PC" device in the LightSync network. Each LightSync address can only be used *once* in a network. If the 5<sup>th</sup> LS device (ID 40005) is used as a LS PC for a slide dimmer, then ID 1057 to 1064 (5<sup>th</sup> LS device) cannot be used for a Button Icon, proceed to the next available LightSync address and related component ID.

## Mobile LightSync Link App ID Point Mapping Chart

Touch Button Component ID		
ID Point	LS Device	Inputs
1025-1032	1st	1-8
1033-1040	2nd	1-8
1041-1048	3rd	1-8
1049-1056	4th	1-8
1057-1064	5th	1-8
1065-1072	6th	1-8
1073-1080	7th	1-8
1081-1088	8th	1-8
1089-1096	9th	1-8
1097-1104	10th	1-8
1105-1112	11th	1-8
1113-1120	12th	1-8
1121-1128	13th	1-8
1129-1136	14th	1-8
1137-1144	15th	1-8
1145-1152	16th	1-8
1153-1160	17th	1-8
1161-1168	18th	1-8
1169-1176	19th	1-8
1177-1184	20th	1-8
1185-1192	21st	1-8
1193-1200	22nd	1-8
1201-1208	23rd	1-8
1209-1216	24th	1-8
1217-1224	25th	1-8
1225-1232	26th	1-8
1233-1240	27th	1-8
1241-1248	28th	1-8
1249-1256	29th	1-8
1257-1264	30th	1-8
1265-1272	31st	1-8
1273-1280	32nd	1-8
1281-1288	33rd	1-8
1289-1296	34th	1-8
1297-1304	35th	1-8
1305-1312	36th	1-8
1313-1320	37th	1-8

Status Indicators Component ID		
ID Point	LS Device	Pilot
0513-0520	1st	1-8
0521-0528	2nd	1-8
0529-0536	3rd	1-8
0537-0544	4th	1-8
0545-0552	5th	1-8
0553-0560	6th	1-8
0561-0568	7th	1-8
0569-0576	8th	1-8
0577-0584	9th	1-8
0585-0592	10th	1-8
0593-0600	11th	1-8
0601-0608	12th	1-8
0609-0616	13th	1-8
0617-0624	14th	1-8
0625-0632	15th	1-8
0633-0640	16th	1-8
0641-0648	17th	1-8
0649-0656	18th	1-8
0657-0664	19th	1-8
0665-0672	20th	1-8
0673-0680	21st	1-8
0681-0688	22nd	1-8
0689-0696	23rd	1-8
0697-0704	24th	1-8
0705-0712	25th	1-8
0713-0720	26th	1-8
0721-0728	27th	1-8
0729-0736	28th	1-8
0737-0744	29th	1-8
0745-0752	30th	1-8
0753-0760	31st	1-8
0761-0768	32nd	1-8
0769-0776	33rd	1-8
0777-0784	34th	1-8
0785-0792	35th	1-8
0793-0800	36th	1-8
0801-0808	37th	1-8

Slide Dimmer Component ID	
ID Point	LS PC Device
40001	1st
40002	2nd
40003	3rd
40004	4th
40005	5th
40006	6th
40007	7th
40008	8th
40009	9th
40010	10th
40011	11th
40012	12th
40013	13th
40014	14th
40015	15th
40016	16th
40017	17th
40018	18th
40019	19th
40020	20th
40021	21st
40022	22nd
40023	23rd
40024	24th
40025	25th
40026	26th
40027	27th
40028	28th
40029	29th
40030	30th
40031	31st
40032	32nd
40033	33rd
40034	34th
40035	35th
40036	36th
40037	37th

Dimmer Status % Component ID	
ID Point	LS Dimmer Output
40065	1.1
40066	1.2
40067	1.3
40068	1.4
40069	2.1
40070	2.2
40071	2.3
40072	2.4
40073	3.1
40074	3.2
40075	3.3
40076	3.4
40077	4.1
40078	4.2
40079	4.3
40080	4.4
40081	5.1
40082	5.2
40083	5.3
40084	5.4
40085	6.1
40086	6.2
40087	6.3
40088	6.4
40089	7.1
40090	7.2
40091	7.3
40092	7.4
40093	8.1
40094	8.2
40095	8.3
40096	8.4
40097	9.1
40098	9.2
40099	9.3
40100	9.4
40101	0A.1

## Mobile LightSync Link App ID Point Mapping Chart

<b>Touch Button</b>		
<b>Component ID</b>		
<b>ID Point</b>	<b>LS Device</b>	<b>Inputs</b>
1321-1328	38th	1-8
1329-1336	39th	1-8
1337-1344	40th	1-8
1345-1352	41st	1-8
1353-1360	42nd	1-8
1361-1368	43rd	1-8
1369-1376	44th	1-8
1377-1384	45th	1-8
1385-1392	46th	1-8
1393-1400	47th	1-8
1401-1408	48th	1-8
1409-1416	49th	1-8
1417-1424	50th	1-8
1425-1432	51st	1-8
1433-1440	52nd	1-8
1441-1448	53rd	1-8
1449-1456	54th	1-8
1457-1464	55th	1-8
1465-1472	56th	1-8
1473-1480	57th	1-8
1481-1488	58th	1-8
1489-1496	59th	1-8
1497-1504	60th	1-8
1505-1512	61st	1-8
1513-1520	62nd	1-8
1521-1528	63rd	1-8
1529-1536	64th	1-8

<b>Status Indicators</b>		
<b>Component ID</b>		
<b>ID Point</b>	<b>LS Device</b>	<b>Pilot</b>
0809-0816	38th	1-8
0817-0824	39th	1-8
0825-0832	40th	1-8
0833-0840	41st	1-8
0841-0848	42nd	1-8
0849-0856	43rd	1-8
0857-0864	44th	1-8
0865-0872	45th	1-8
0873-0880	46th	1-8
0881-0888	47th	1-8
0889-0896	48th	1-8
0897-0904	49th	1-8
0905-0912	50th	1-8
0913-0920	51st	1-8
0921-0928	52nd	1-8
0929-0936	53rd	1-8
0937-0944	54th	1-8
0945-0952	55th	1-8
0953-0960	56th	1-8
0961-0968	57th	1-8
0969-0976	58th	1-8
0977-0984	59th	1-8
0985-0992	60th	1-8
0993-1000	61st	1-8
1001-1008	62nd	1-8
1009-1016	63rd	1-8
1017-1024	64th	1-8

<b>Slide Dimmer</b>	
<b>Component ID</b>	
<b>ID Point</b>	<b>LS PC Device</b>
40038	38th
40039	39th
40040	40th
40041	41st
40042	42nd
40043	43rd
40044	44th
40045	45th
40046	46th
40047	47th
40048	48th
40049	49th
40050	50th
40051	51st
40052	52nd
40053	53rd
40054	54th
40055	55th
40056	56th
40057	57th
40058	58th
40059	59th
40060	60th
40061	61st
40062	62nd
40063	63rd
40064	64th

<b>Dimmer Status %</b>	
<b>Component ID</b>	
<b>ID Point</b>	<b>LS Dimmer Output</b>
40102	0A.2
40103	0A.3
40104	0A.4
40105	0B.1
40106	0B.2
40107	0B.3
40108	0B.4
40109	0C.1
40110	0C.2
40111	0C.3
40112	0C.4
40113	0D.1
40114	0D.2
40115	0D.3
40116	0D.4
40117	0E.1
40118	0E.2
40119	0E.3
40120	0E.4
40121	0F.1
40122	0F.2
40123	0F.3
40124	0F.4
40125	10.1
40126	10.2
40127	10.3
40128	10.4