


# LightLEEDer EVO Integrated-2 Relay Panel Installation Details

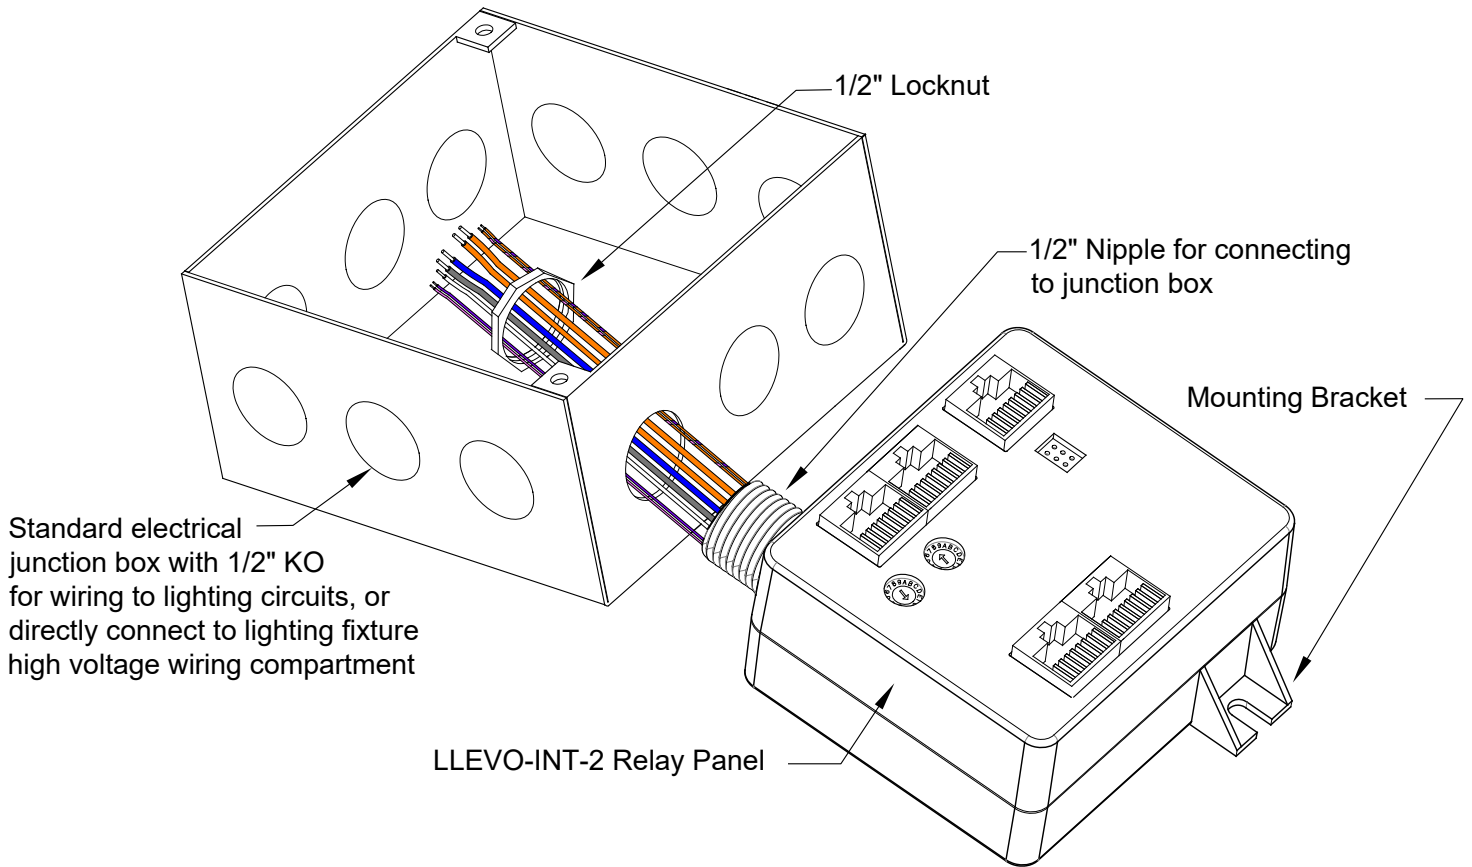

## Installing the LightLEEDer EVO-Integrated-2 Relay Panel:

- Remote mount the LLEVO-INT-2 relay controller in an easy to access location, typically at the power junction box feeding the first light fixture to be controlled, or directly to the fixture.
- Verify that the controller is within 50 to 100 feet of CAT-5 cable distance to the photo sensor or occupancy sensors to be connected, and within 300 to 600 feet of CAT-5 cable distance to the LightSync switches intended for control.
- Mount the EVO-INT-2 panel to a junction box or fixture using the 1/2" nipple and secure using the 1/2" locknut provided and mounting bracket.

## Operating Environment:

- Location: Interior
- Operating Temp: 0-50 deg. C
- Humidity: 10-90% Non-Condensing
- Atmosphere: Non-Explosive/Corrosive
- Vibration: Stationary