

ILC LightLEEDer Net Host Software  
Release Notes

Version 27 10-Sep-2011

Addition of selective configuration clearing on Tools | AutoMap Tools screen

- Clear all input to relay mapping
- Clear all input to group mapping
- Clear all groups
- Clear all presets
- Clear all timer settings
- Clear all timer mapping

Version 28 11-Nov-2011

Gray out unused groups and presets in status screens

Fixed motor output / Preset control / Run duration display issue

(Display issue only. No changes to data files or upload/download)

Added Atlantic and Newfoundland time zones

Fixed Node 00 Device 40-7F Input to Group issue

(Edit issue only. No changes to data files or upload/download)

Added Pilot Auto Map for Node 00 inputs to groups and presets

Version 29 13-Jan-2012

Added "Copy Relay Mapping" button and source to input to relay mapping screen

Added "Copy Group Mapping" button and source to input to group mapping screen

Added arrow key functions to photocell tracking screen for more accurate scaling

Version 30 15-Feb-2012

Added dimmer output to relay control functions

Version 31 27-Feb-2012

Added name export function

Version 32 09-Mar-2012

Added screen for notes

Changed text from "Change Panel Password" to "Change System Password"

Changed MN text to NC

Set file name to NONE when uploading settings

Version 33 16-Apr-2012

Changed text Retro HWI to Retro LMI

Changed text Retro Hardwire Inputs to Retro LightMaster Inputs

Version 34 04-Jun-2012

Longer names shown for relays, groups, presets, and timers

Added Ctrl-C / Ctrl-V copy and paste key functions to name edit screens

Version 35 17-Sep-2012

PC level to foot candle scale adjusted to reflect measured readings

Version 36 17-Aug-2013

PC output power on level defaults set to 100%

Widened group drop down box in relay groups screen

Widened preset drop down box in edit preset screen  
Fixed minutes/preset/timer from showing when LightSync device type is set to none

Version 38 18-Feb-2015

Password is ignored if a panel memory is completely cleared.  
-All 6 ASCII chars are value 00x rather than 30x-39x  
Added note to communications screen warning of cancelling downloads  
Added dimmer feedback option on photocell input configuration  
Added all 8 bits button on dimmer feedback configuration  
Added options on automap pilots  
-Clear all pilots prior to mapping  
-Do not change configured pilots  
-This node only  
Added options on automap toggle sources  
-Do not change configured toggles (Defined as source node < > 00)  
-This node only  
Both automap pilots and toggles find first relay/group rather than last  
Both automap pilots and toggles only process active nodes  
DMX mapping  
-Click on a relay and select DMX channel  
-Hold shift and click on last relay to set them all the same  
-Hold shift and right click on last relay to set them all in sequence  
Input to relay and group copy function has an "All 8 Inputs" option  
Added dimmer control copy functions to select outputs  
-Current node or all nodes  
Modified dimmer configuration copy so you can select outputs  
-Current node or all nodes  
Added new input pilot types to documentation files  
-Dimmer output level feedback  
Documentation functions complete

Version 39 01-May-2015

Documentation function changes

Version 40 17-Jul-2015

Fixed relay name / multi pole display issue

Version 41 24-Aug-2016

Fixed documentation file output discrepancies

Version 45 17-Oct-2016

Fixed documentation file output discrepancies  
Added new fields to documentation file output  
-Separate columns for relay on/off and group on/off control  
-Preset schedule control of dimmer and motor outputs  
-Timer schedule control of dimmer and motor outputs  
Modified toggle source auto map to apply only to PB Toggle and Maintained MW  
Modified pilot auto map for PB Off input type to invert relay status  
Added function button to auto configure pilots mapped to control dimmer outputs

Version 46 19-Oct-2016

Fixed timer AM/PM display on timer to relay, group, and preset screens

- Version 47 14-Nov-2016  
Modified download sequence to minimize possibility of dimmers going to 0%  
Dimmer control items may now be clicked to select active control
- Version 48 01-Mar-2017  
Added Export To InSite function for panel names and mapping
- Version 49 08-Mar-2017  
Added COPY button on documentation screen for folder path  
Changed Download/Upload to Send/Get on connect screen
- Version 50 22-Mar-2017  
Added Ramp Down/Up to dimmer control options
- Version 51 10-Apr-2017  
Added Inverted Input function to dimmer output control configuration
- Version 52 03-Aug-2017  
Added Export/Import functions for single node settings
- Version 53 15-Dec-2017  
Added direct dimmer control and photocell/DMX control disable  
Added right click control configuration on dimmer screen
- Version 54 22-Jan-2018  
Fixed direct dimmer control 100% setting issue
- Version 55 03-May-2018  
Added TCP/IP port selection in connection setting  
Default port remains 10001 in absence of :<port> field
- Version 56 26-Jul-2018  
Added network selection for Export To InSite tool to support multi-network InSite
- Version 57 19-Sep-2018  
Export to InSite tool changed to clear mapping for disabled nodes
- Version 58 10-Oct-2018  
Export to InSite tool changed remove invalid characters
- Version 59 21-Dec-2018  
Retain last downloaded images on host PC  
Allow "Download changes only" on first download after program restart  
Added selective download to allow partial systems to be configured  
Added "Bypass NC / Direct Connect" via a diagnostic tool for partial systems

Version 60 22-Jul-2019

- Changed open screen logo and phone number
- Added link to website
- Added support for direct connection to EVO through protected port
- Added support to recover from lost access key
- Added quick links to navigate from screen to screen
- Added Copy and Auto Map functions on Dimmer to Relay screen

Version 61 24-Jan-2020

- Variable Digital Input functions added
- Scene to Dimmer edit added to keypad
- Allow scene control from node edit screen added
- Input types Set Scene and Capture Scene added
- Last scene set = 01-32 pilot type added
- Add MZD auto map function added
- Add MZS auto map function added
- Set scene and capture scene commands added
- Pilot dimmer value changed to set point rather than actual ramping level

Version 62 13-Feb-2020

- Add Scene device auto map function added
- Change MZS to SMZD

Version 63 26-Aug-2020

- Changed Last Scene pilot to Scene True
- Added firmware revision notice when selecting HID input type
- Changed “Photocell (2 sec filter)” to “Photocell/VDI”
- Added scene status and control screen
- Added G3 reconfiguration tool on input status screen
- Added relay repurposing configuration (InSite support)
- Added “This Node Is An Advanced Interface” to panel settings screen

Version 64 21-Jan-2021

- Added tool for occupancy sensor / power on settings
- Added dimmer control options based on open/closed times
- Added delayed dimmer goto% actions
- Changed FF node references to ME references
- Added tool on Edit Presets screen to add relays by group

Version 65 05-Feb-2021

- Added timer to scene mapping functions

Version 67 12-Mar-2021

Note: This change was made to support separate timers on each node for the app.

Added option for local timers, timer/group, timer/preset, and open/close times

While in “Global” mode, NC operation has not changed

While in “Local” mode:

- Timer configuration is local to each node

- Timer to groups and presets is local to each node

- Group and preset status pilots are local to each node

(The NC still maintains system-wide group and preset status)

- Off hours sweeps to group mapping is local to each node

- Open/close times are local to each node

Added “Copy Timer” function to timer configuration while in local timer mode

Added compressed upload option to connect screen

Version 68 08-Jul-2021

Tools modified for additional ramping settings

Export names to InSite modified to support single and multi-network installations

Ramp cycle dimmer control option added for EVO-PR

Added Scene Sequence input type for EVO-INT

Added scene edit tool

Added scene sequence edit tool

Added dimmer status screen

Added update button on dimmer output screen

Main screen dropdown menus reconfigured

Fixed set/capture scene issue in documentation screen that limited scenes to 1-32

(Note: No functional issue, only an issue in the documentation file)

Added tool on system diagnostic screen to poll nodes for firmware revision

Version 70 12-Jul-2021

Added copy relay conditionals to auto map tools screen

Version 71 22-Jul-2021

Added selective upload (right click on upload button)

Fixed input type on status screen / Type B

Note: Firmware issue / will be forward compatible after firmware fix

Version 72 12-Nov-2021

Fixed Import function for dimmer control types VDI and Input/Invert Open/Closed

Installer now ignores exit fault codes from Silicon Labs USB driver setup

Version 72 29-Nov-2021

No program changes

Install program updated with latest Silicon Labs USB drivers

Version 73 12-Jan-2022

Fixed Add MZD-1 tool