
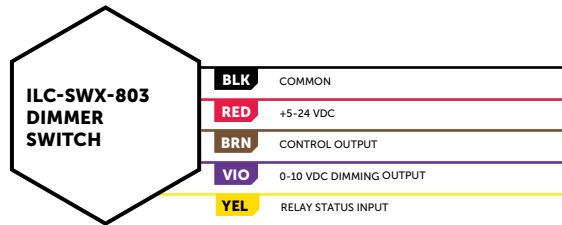


WIRING

STANDARD WIRING

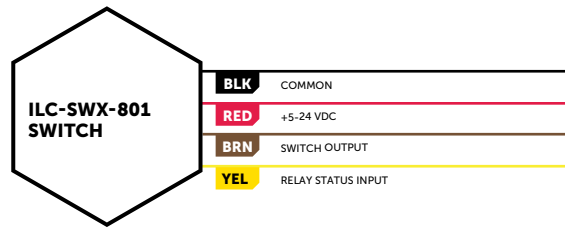

MANUAL ON APPLICATION (VACANCY)

- Default operation of the ILC-SWX-900-AX is Automatic On (Occupancy) operation. For proper vacancy operation, the ILC-SWX-900-AX's OPERATIONAL MODE setting needs to be configured for MANUAL ON (VACANCY).
- Additional ILC-SWX-801 switches can be wired in parallel to achieve 3-way (or more) operation.

