

LightSync G3 Non-Dim Switch Station Programming Technical Bulletin

The LSG3 Non-Dim switch should be factory set for the button configuration provided. To change the configuration and buttons refer to PD0628 and PD0629. This LSG3 Non-Dim switch station will use one LightSync device address for the Zone & Off buttons.

Configuring the LightSync G3 device with the LightLEEDer panel keypad or LL-Pro software:

- 1 Navigate to "**Switch Inputs**", then "**Configure Inputs**".
- 2 Select the LightSync Device hex number to be used for this station.
- 3 Select the device type or button count needed, a 3-Zone Non-Dim will use 4 buttons.
- 4 Change each Zone Buttons **Type A** input to a "**Push Button Toggle**"
- 5 Set the **Input Toggle Source Relay** to the load relay to be controlled.
Example: "**Node: 01**" and "**Relay: 01**" for the first relay in the panel.
- 6 Set the **Pilot Configuration** to the status operation and load relay controlled.
Example: "**Relay On**", "**Node: 01**", "**Relay: 01**"
- 7 Navigate to **Relays, Input Mapping, Local Input To Relays**. Select "**On/Off**" action for relay 1, from input 1, of the device.
- 8 Repeat this process for all Zone buttons on the device.
- 9 For input 4 in our example, the Off button you will select "**Push Button Off**" for Type A
- 10 The toggle source will not need configuration, and the pilot will be configured for "**Always Off**"
- 11 Under relay mapping you will select "**Off**" as the action.

Note:

Input 8 Pilot is left at "**Always ON**" and will look to the other pilots on the station, activating the Finder LED when all pilots are Off. to disable this select "**Always Off**" for the pilot on input 8
In the LightLEEDer Software use the *Quick Links* navigation to jump from input to relay output and back.

