


ILC Photoelectric Partition Sensor & LightSync Conditional Occupancy Sensor Input Module Wiring Details

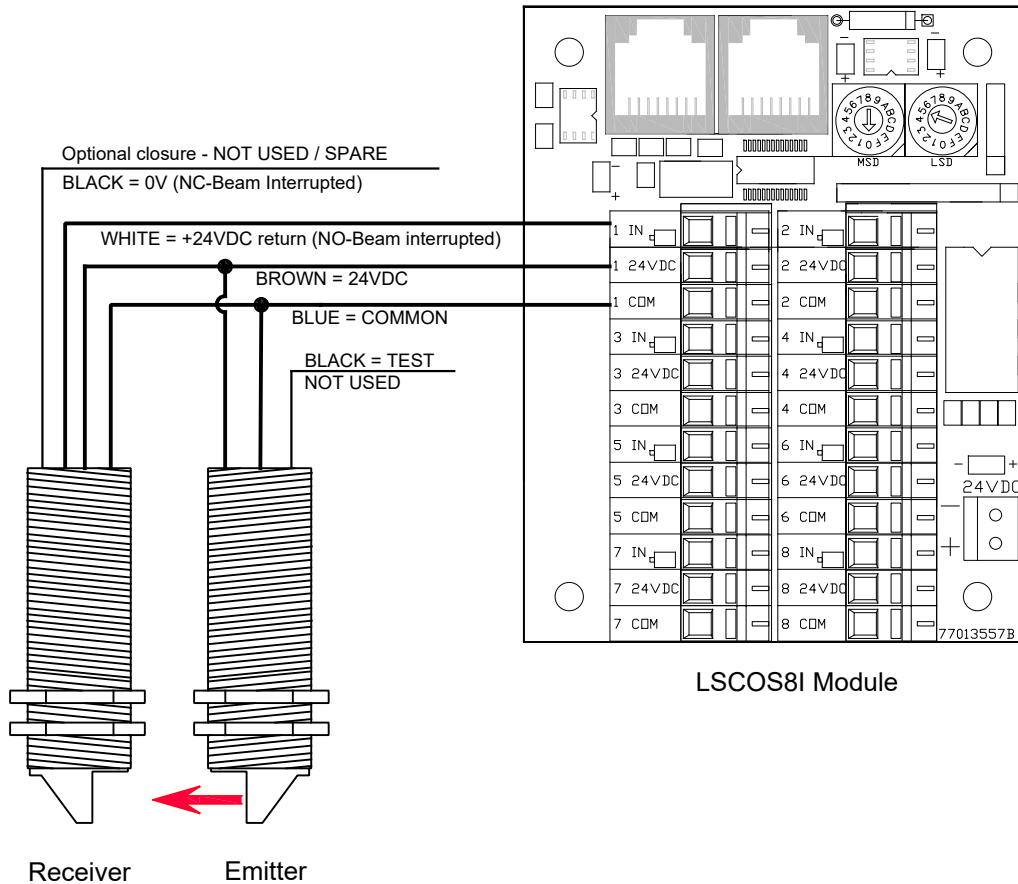

Photoelectric Partition Sensor wiring to LightSync conditional occupancy sensor input module for disabling ILC "Echo" inputs when wall partition is out and beam is interrupted - use white return wire (no). optional black (nc) return should be pulled to input module for reverse wiring if needed.

PNP Right Angel Emitter/Receiver

Blue = Common

Brown = 24vdc Power to sensor

White = +24VDC Return when beam is interrupted (beam clear = 0V)

Black = 0V Return when beam is interrupted (beam clear = +24VDC)