LightSync Input Module
Installation Details

6-pin receptacle

Mounting standoffs (4)

6-32 screws (4)

Pre-drilled mounting holes (4) for attaching to enclosure.
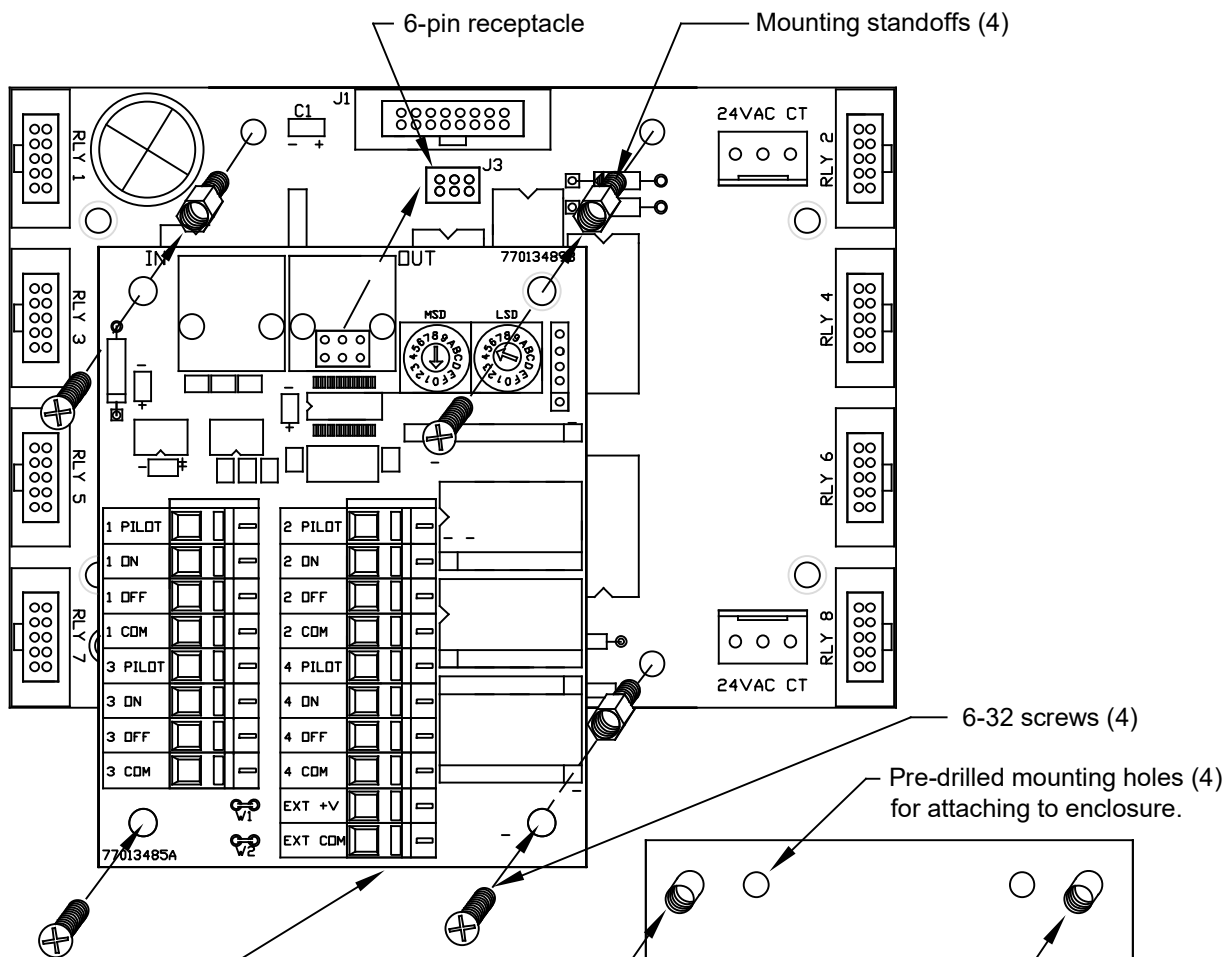
PANEL MOUNT:

The module can be mounted directly on the Relay Driver Module in the LightLEEDer panel. The module must be installed on the next available relay control module from the top down. Turn the power to the Controller OFF. Carefully align the 6 header pins on the back of the module with the 6 pin receptacle located on the top of the Relay Driver Module, gently push and verify the connection and install the 6-32 screws provided. Verify the connection and set the address before powering the device.

REMOTE MOUNT:

Remove the module from the mounting plate by removing the 4 #6-32 screws. Fasten the plate in a enclosure using the self-drilling screws provided. Replace the module and secure with the 4 screws previously removed. The optional LightSync Device Junction Box Cover (LSDJBC) can be used for mounting on a 4-11/16" J-box.

#78001528

Threaded standoff (4)

6-32 Screws (4)

intelligent
lighting controls

ilc-usa.com | 952.829.1900

ID0618 Rev. B