

Programming a Switch

Select the Switch Input and Type

1. From the Home screen, press ► **EDIT**.
2. Press ► **SWITCH INPUT**.
3. Press ► **LOCAL INPUTS**.
4. Press ► **SWITCH INPUT OPTIONS**.
5. Press ▲ or ▼ to select the desired switch input number.
6. Press ► **TYPE**; then ▲ or ▼ until the desired switch type appears on the screen.

Map the Switch to a Relay


1. From the Home screen, press ► **EDIT**.
2. Press ► **SWITCH INPUT**.
3. Press ► to select **LOCAL INPUTS**.
4. Press ► **INPUT/RELAY CONTROL**.
5. Press ► **INPUT/SINGLE RELAYS**.
6. **INPUT** is displayed; then press ▲ or ▼ until the controlling input you want appears.
7. Press ► **RELAY**; then press ▲ or ▼ until the relay to be controlled appears.
8. Press ► **ACTION**; then press ▲ or ▼ until the desired relay response appears.

Define a Relay Group

1. From the Home screen, press ► **EDIT**.
2. When the MAIN menu appears, press ► **RELAY OUTPUTS**.
3. Press ► **RELAY GROUPING**
4. When the Relay Grouping screen appears, press ▲ or ▼ to select the relay group number.
5. Press ► **RELAY** then ▲ or ▼ until the first relay to be part of the group appears.
6. Press ► **INCLUDE** until YES appears in the entry field.
7. Repeat steps 5 and 6 to include additional relays.
8. Press ► **EXIT** 3 times to return to the Home screen.

Map a Switch to a Relay Group as you would a Single Relay by choosing INPUT/RELAY GROUPS in the mapping example above.

Apprentice 3

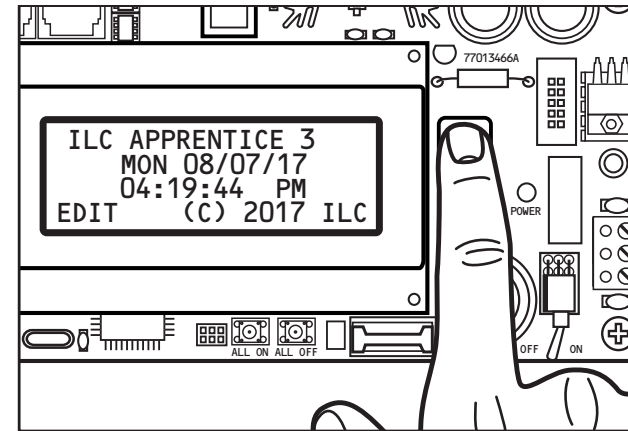

Quick Reference Guide

This Quick Reference Guide will aid you with some of the common situations you will encounter in programming your ILC Apprentice 3 lighting controller. If you have not already done so, clear all memory and set up the controller before entering any programming. For further information or to address specific features, please reference the Apprentice 3 User Guide (available for download from our web site) or contact a factory representative.

We hope you enjoy the flexibility, ease of use, and reliability the ILC Apprentice 3 controller brings to your lighting control.

Turn power to the controller **ON** via the toggle switch located to the lower right of the processor board.

 **intelligent**
lighting controls

www.ilc-usa.com
5229 Edina Industrial Boulevard
Minneapolis, Minnesota 55439
Phone 952 829 1900

How to Set the Controller Clock

Setting the controller clock to the proper time and date is fundamental to the execution of all time based operations.

1. From the Home screen, press **EDIT**, then press **▲** twice.

2. From the main menu, press **SET TIMERS**.

3. From the Set Times menu, press **TIME** and **DATE**.

4. From the Time/Date menu, press **TIME**.

5. When the Time Setting screen appears, press **▲** or **▼** until the proper hour is displayed. Be sure that AM/PM setting is correct.

6. Press **MINUTE**; then press **▲** or **▼** until the correct minute is displayed.

is displayed.

7. Press **SET** to return to the Time/Date menu.

8. Press **DATE**.

9. **MONTH** is displayed; then press **▲** or **▼** until the correct month is displayed.

10. Press **DATE**; then press **▲** or **▼** until the correct day of the month is displayed.

is displayed.

11. Press **YEAR**; then press **▲** or **▼** until the correct year is displayed.

12. Press **SET** to return to the Time/Date menu.

13. Press **DAY**; then press **▲** or **▼** until the correct day of the week is displayed.

14. Press **SET** to return to the Time/Date menu.

15. Press **EXIT** 3 times to return to the Home screen.

How to Set the Astro Clock

1. From the Home screen, press **EDIT**; then press **▲** twice.

2. From the Main Menu press **SET TIMERS**.

3. From the Set Times Menu, press **ASTRO CLOCK**.

4. When the Astro Clock screen appears, press **▲** or **▼** until the proper latitude appears.

5. Press **LONGITUDE**; then **▲** or **▼** until the proper longitude appears.

6. Press **TIME ZONE** then **▲** or **▼** until the proper time zone appears.

7. Press **EXIT** 3 times to return to the Home screen.

Note: The current sunrise and sunset times for the global coordinates selected appear at the bottom of the Astro Clock screen (R and S).

(The default coordinates are for Minneapolis Minnesota.)

Setting a ON/OFF Timer

Define the Timer

1. From the Home screen, press **EDIT**; then **▲**.

2. From the Main Menu, press **TIMERS**.

3. Press **CONFIGURE TIMERS**.

4. Press **▲** or **▼** until the Timer to be defined appears on the screen.

5. Press **TIME**; then press **NORMAL** to select conventional AM/PM time (press **ASTRO** to select time in relation to sunrise/sunset).

6. Press **HOUR**; then **▲** or **▼** until the desired hour (AM or PM) appears.

7. Press **MINUTE**; then **▲** or **▼** until the desired minute appears; then press **EXIT**.

8. Press **DAYS**; then **DAILY**.

9. Press **▲** or **▼** and as each day appears press either **YES** or **NO** to select whether or not the timer is to be active on that day.

Selecting Relays for the Timer

1. From the Home screen, press **EDIT**; then **▲**.

2. From the Main Menu, press **TIMERS**.

3. Press **▲** or **▼** until **TIMER/RELAY CONTROL** is displayed.

4. Press **TIMER/RELAY CONTROL**.

5. Press **TIMER/SINGLE RELAYS**.

6. **TIMER** appears; then press **▲** or **▼** until the timer number you want appears.

7. Press **RELAY**; then press **▲** or **▼** until the relay to be controlled appears.

8. Press **ACTION**; then press **▲** or **▼** until the desired relay response appears.

9. Press **EXIT** 4 times to return to the Home screen.

Definitions

Actual key strokes/entries appear as keypad buttons: for example **▲**

TIME = expressed in either **NORMAL** or **ASTRO TIME**. **NORMAL** time is defined in **HOUR(s)** and **MINUTE(s)** AM or PM. **ASTRO TIME** is defined in relation to **SUNRISE** or **SUNSET**.

RELAY = one of up to 48 relay outputs controlled by the timer or switches

TIMER = a time based event that can control one or more relays

ACTION = how the relay responds to the timer.

DAYS = **DAILY** the day(s) of the week or timer occurrence or **HOLIDAY**, the holiday date of occurrence.